
ENZOTECH

SNBW-REV.A

User's Manual

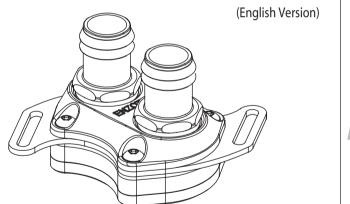

Precautions

- -Test product for leakage away from system before installing All products are leak-tested prior to shipping; however, damage can occur during shipping and subsequent handling Once no leakage is confirmed, proceed with the installation and use. Always check your circuit for leaks prior to
- -Never use harsh chemicals to clean your water block. Alcohol or any other harsh solvent may cause damage to certain materials used in the manufacturing of the water
- -keep this product and its associated installation items away

Total thread length greater than 6.5 mm / 0.256 inch will cause



- 1)High density stagger fin design, provides maximum surface exposure area for superior cooling performance.
- 3.Components run-out which optimizes surface contact and maximizes thermal conductivity performance.
 - a)One (1)User's Manual
 - c)One (1)O-Ring(Pre-Assembled)

damages to the top (cap). Enzotech will not guarantee this type of damage due to human factor.




1 Features


- 1.Dimension(L x W x H): 59.2x53.1x17.5mm 2.Base(L x W x H): 45x35x7.5mm
- 2)Water block's base is machined to .0003 per inch
- 3) Multiple mounting systems for maximum installation versatility
- b)One (1)Northbridge Water Block 4)Compatible with most recent SLI motherboards.
- d)Two (2)1/2" HI-Flow Host Barbs 5)100% leak tested and inspected direct from factory. e)Two (2)Tube Clamps


- f)One (1). Irlic Silver Ceramique Thermal Grease (OEM) g)One (1)Allen Wrench #2
- h)One (1)Sponge (For Flip Chip Users) I)Four (4)M3X10L Screws



















1).Spring Mount Installation

Spring Mount Pack

E) Two (2) Springs

A) Two (2) M3x30 Screws


B) Four (4) Fiber Washers








- 2. Clean the surface of the northbridge chipset and apply the provided thermal compound evenly on the chipset surface
- 3. Install the two Mounting Posts/M3x30 Screw (A) as shown in the schematic and fasten them with Nuts (F) and Washers(B)
- Install the Sapphire Northbridge Waterblock on the northbridge chipset. Install the Spring (E), Tension Limiters(C), and Thumb
- Gradually and alternatively fasten the Thumb Screw until the



If the mounting bracket does not interfere with the components on underneath the loop of the MB. the motherboard, then it is not required to remove the mounting



A) Two (2) Wire Clips

B) Four (4) Spacers C) Four (4) M3x10L Screws

Wire Clips Pack

- 1. Remove old fan/heatsink from motherboard.
- 2. Clean the surface of the northbridge chipset and apply the provided thermal compound evenly on the chipset surface
- 3. Install the Sapphire Northbridge Waterblock on the northbridge chipset

Hard Mount Installation

Hard Mount Pack

B) Four (4) Fiber Washers

1 Remove old fan/heatsink from motherboard

- provided thermal compound evenly on the chipset surface
- 3. Insert Screws (A) thru the top of the Sapphire Northbridge
- 4. Fasten Nylon spacers(C) and Washers(B). Place the waterblock on the chipset and fasten it from the back of the

Fasten the nuts alternatively and incrementally to maintain as even pressure on the chipset as possible.

A) Two (2) M3x19 Screws

C) Two (2) Nylon Spacers

- 2. Clean the surface of the northbridge chipset and apply the
- motherboard using the provided metal nuts (D)

workmanship. During this period, Product will be repaired of have parts replaced, provided; (I) the products is returned to the agent from which it was purchased: (II) the product has not been misused, handled carelessly or other than i accordance with any instructions provided with respect to its use. This guarantee does not confer rights others than those expressly set out above and does not cover any claims

7.Important Disclosures:

6 WARRANTY

Enzotech is not responsible for any damages due to external causes.including but not limited to, improper use, problems with electrical power, accident, neglect, alteration, repair. improper installation, or improper testing.

ENZOTECH

ENZOTECH ENZOTECH

ENZOTECH

/Thumb Screw (

<u></u> #3x30 Screw (A)

ENZOTECH

ENZOTECH

M3x0.5 Screw (C)

4. Remove the top cover and mount the bracket. Next. fasten

m3x10L screws to the base. Insert the books of the wire clips

ENZOTECH

ENZOTECH

Our products are guaranteed for 12 months from the date of

delivery to the final user against defects in materials or

for consequential loss or damage. This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer.

ENZOTECH